

# Internet

## Connecting your modem

Required material, models may vary



Modem



Power supply



Telephone cable



Two-line filter




Network cable



2 One-line filters

- Install a phone filter on every outlet in your home that you will plug a phone into.
- Plug one end of the phone cable into the grey “LINE” port in back of the modem and the other end directly into the phone outlet.

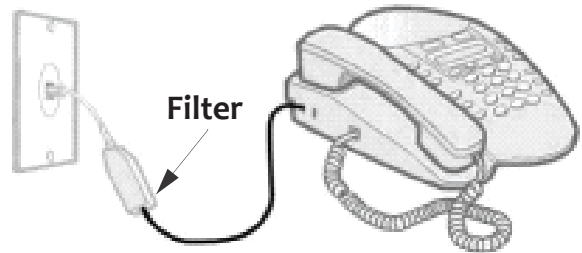


### Important note

Never plug the **ONE-LINE FILTER** into the outlet you want to plug the modem into. If you also want to use a phone on this plug, use a **TWO-LINE FILTER** and plug the modem cable into the port that says **DSL** and the cable from the phone in the **PHONE** port.

- Plug one end of the yellow network cable into the **LAN1** port in back of the modem and the other end into the network port on your computer. **You must use the LAN1 port on the modem.**
- Plug the round end of the power supply cable into the modem and the other end into an electrical outlet or a power bar.
- If the modem has synchronized properly, the red light will turn off after a short period of time, between 30 seconds to 2 minutes.

Plug one end of the phone cable into the LINE port on the modem and the other end into the phone jack.

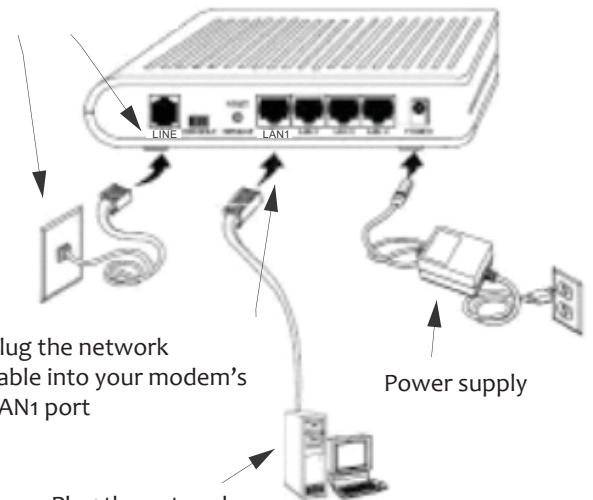

Plug the network cable into your modem's LAN1 port

Power supply

Plug the network cable into your computer's network card.